
Rear Smart Entertainment

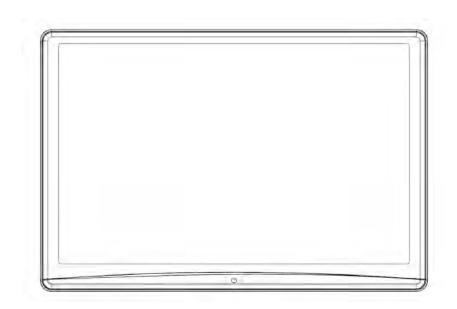


Owner's Manual

Content

Part 1. Basic Operations	1
Part 2. Setup	5
Part 3. Music	10
Part 4. Photo	12
Part 5. Video	15
Part 6. HDMI	18
Part 7. Phone Link	19
Part 8. AUX Mode	25
Part 9. Lights	26
Part 10. Installation	27
Part 11. Device Connection	29

1-1. Description of Parts

Main Controller Screen / Data (USB, HDMI) Screen

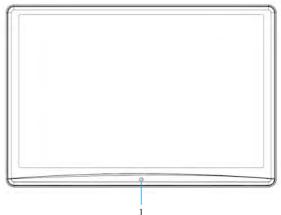


Basic Control Buttons:

1. Power

Press to turn on power of the unit.

Press the power button again to switch off mode.

 - 2. HDMI input
- 3. Reset
- 4. TF card interface
- 5. HDMI output
- 6. USB port
- 7. 3.5mm Earphone interface
- 8. DC 12V input



1-2. Getting Started

System Start

- 1. To start the system, the vehicle ignition key switch must be in the ACC or engine ON position.
- 2. Press "Power" button to turn on power of the unit.
- 3. After Logo image display, Main Menu will appear on Main Controller Screen.



1-3. Return to the previous Menu

Press the button \triangleleft at the upper Left-hand corner of Screen to move to the previous Menu.



1-4. Screen Off

Press the button **b** on the unit.

The audio of AV keeps playing while the screen is turned off. Touch the power button to turn the screen on again



1-5. Brightness & Volume Control

1. Press the SETUP button on the Main menu screen.





1-6. Choosing the File from the File List





- Move to the file list
 Touch the screen and drag upwards or downwards to scroll through a file list.
- Move to a folder in the file list, Touch a folder from the file list.
- Return to Previous Folder icon to move to the upper level folder.

2. Press the SETUP button on the Main menu screen



2-1. WIFI Setting

• The Wi-Fi connection status is always display on upper center of the screen.



- Touch the WIFI setting, and turn On WIFI makes your device able to connect to compatible in-range wireless access point (WAPS).
- To access network Touch the WIFI network field and touch the network you want to connect .
- Enter a wireless password if necessary

2-2. APP Link

APP LINK is a feature that allows you to control the APP LINK via your mobile device to play videos or look at pictures, the APP LINK user interface will be displayed on your mobile device.












- Turn on personal hotspot on your mobile device.
- Select MyCar Link in the system menu.
- Connect to your personal hotspot from the APP LINK monitor.
- Open the MyCar Link app on your mobile device.
- Select the MyCar Link monitor of your preference.
- Once selected the MyCar Link user interface will be displayed on the mobile device.
- You can now control the MyCar Link via your mobile device.

(i) INFORMATION

>>

The MyCar Link app is available to download on the Apple Appstore and Google Play Store.

2-3. Speaker

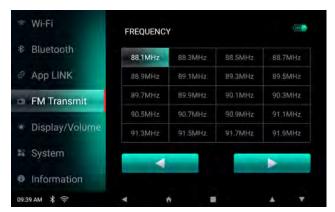

- ◆ Radio Transmitter
 Press On/Off buttons to turn Radio Transmitter On/Off.
- ◆ Radio Frequency

 Press the button or to turn previous or next page, once the frequency has been selected tune the vehicle radio.

There are total 5 FM Channel pages containing frequency from 88.1~107.90MHz in 0.2MHz step.

Note: (FM tips) First, turn on the device's FM, tune to a channel without local programs, and then adjust the car's FM to the same channel.

Then the sound will be transmitted through the car stereo.

(i) INFORMATION

For best result, select a station with minimal background noise or existing broadcast in your area, the best method to do this is to first turn the FM transmitter feature OFF, and then check the following stations one by one to look for the one with least interference or existing broadcasts-88.1, 88.3, 88.5...107.7,107.9. Ideally you should find a station with a clean "white noise".

Set this as one of your pre-sets on the car's stereo, then turn ON the transmitter and adjust the frequency on the Rear Seat Entertainment to match this number.

2-4. Bluetooth

• Touch the ON/OFF button to turn ON/OFF of bluetooth



2-5. Language

• Press either of English, Arabic, French, Spanish or German to change the main menu language.



2-6. Information

Press the Information button on the Setup mode screen.
 This will display version numbers of the Firmware and application.
 Press the Factory Reset button to return system to the factory default.
 Press the back button to move back to the previous mode.



Press the "CHECK FOR UPDATE" button to check for new software availability.

(i) INFORMATION

The factory reset process will take 2~3min. Do not power off the system during factory reset in progress. When monitors are connected to a Wi-Fi, the monitors will be able to receive software updates if software update is available. The system will require periodic updates which are managed through "Over-the-Air" software updates, an "Update Available" message will appear on the home screen of the monitors.

Part 3. Music

Press the Music button on the Main menu screen.



3-1.Music Mode Window Components




- 1 Album Art: Display the album image of the current file that is playing.
- 2 Play time: Display the play time of the current file.
- 3 Total Time: Display the total play time of the file.
- [4] Repeat/Shuffle Button: Turn the Repeat/Shuffle function ON / OFF.
- 5 Previous Button: Select previous track.
- 6 Play/Pause Button: Play or pauses the file.
- 7 Next Button: Select next track.
- 8 File List Button: Enters the media file list.

Part 3. Music

3-2. Music Mode Basic Actions

1. Press the file list Button

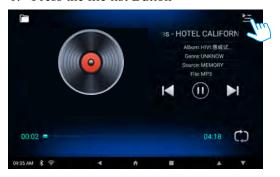




2. Choose a music file from the file list.



3. The selected music file will be displayed.

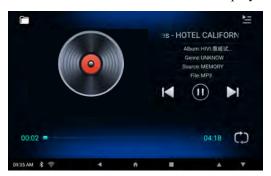


Part 4. Photo

Press the Photo button on the Main menu screen.



4-1.Photo Mode Window Components

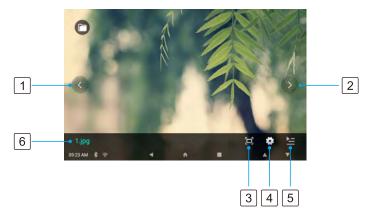


- 1 Previous button: Select previous photo.
- 2 Next button: Select next photo.
- 3 Aspect Ratio button: Select ratio 3:4 or 16:9 aspect ratio.
- 4 Slide show button: Set the slide show timing.
- 5 File List Button: Enters the media file list.
- 6 Photo Title Display: Display the title of the photo.

Part 4. Photo

4-2. Photo Mode Basic Actions

1. Press the file list Button

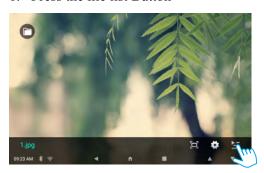


>>

>>

3. Selected photo file will be displayed.



2. Choose a photo file from the file list.

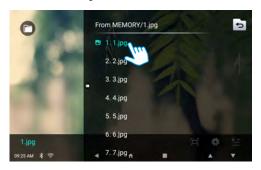

4. Each time you touch the screen, the screen will move back and forth between full screen and previous menu



Part 4. Photo

4-3. Slide Show

1. Press the play Button





4-4. Aspect Ratio

1. Press the Aspect Ratio button to switch the screen mode to 16:9.





- 2. Setup the show time. The next photo will be automatically displayed after the set time is reached.
- 3. Press the OFF button to stop the slide show.



2. Press the Aspect Ratio button and the screen will move back to 4:3 screen mode.



Part 5. Video

Press the Video button on the Main menu screen.



5-1.Video Mode Window Components



- 1 Play Time: This display the play time of the video.
- 2 Title: Display the title information of the current file.
- 3 Aspect Ratio: Select screen ration aspect 16:9 or 4:3.
- 4 Previous Button: Select previous video file.
- 5 Play/Pause Button: Play or pauses your video.
- 6 Next Button: Select next video file.
- 7 File List Button: Enters the media file list.
- 8 Total Time: Display the total play time of the file.

Part 5. Video

5-2. Video Mode Basic Actions

1. Press the file list Button





3. The selected video file will be displayed.



2. Choose a video file from the playlist.



Part 5. Video

4. Slide up or down on the left of the screen to adjust the brightness level.




5. Slide up or down on the right of the screen to adjust the volume level.



>>

Part 6. HDMI

Connect the AV equipment and the rear seat entertainment with HDMI cable.

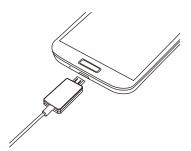

1. Connect the HDMI button on the main menu screen.



2. The screen will show icon if the HDMI cable Disconnected with the device or AV signal source not detected.



3. Video and Audio output from connected AV device will be played by RSE.



*This function is only available on Main Controller Unit.

Phone Link is a feature that allows you to enjoy music stored on mobile devices, your videos or pictures through Rear seat entertainment system.

- 1) Mirroring Function with Android Phones OS software version has to be minimum 6.0 onwards.
- 2) iPhone Mirroring/AirPlay OS is compatible iOS 15 version and below.
- 3) Operation will vary depending on the Android device and software version of the Android OS.
- 4) Compatibility with all Android devices is not guaranteed.

7-1. Phone Link Connection

- How to connect Android phone.
- 1. Press the Phone link button on the Main menu screen.



2. Press the Android Button.



3. The device name and the operating system will appear on the screen.



4. Select "Multi-screen interaction" in the Android system and find the corresponding device name needed to connect and then click to select.



5. After successful connection, picture operated on Mobile phone will synchronously display on the device.



6. Select "Multi-screen interaction" of mobile phone, and then select "Back to my device" and then you can exit mobile phone interconnection.



- How to connect iOS phone.
- 1. Press the Phone link button on the Main menu screen.



2. Press the iOS Button.



3. Press HDMI or continue for iOS Airplay connection.



4. Press the Personal Hotspot of your device, turn on the "Hotspot" and enter the Wi-Fi hotspot password on the setting screen.







5. Search connectible Wi-Fi hotspot of iOS device. Press scan button and select your device hotspot from the list and then press Start button.



6. The device name and the operating system will appear on the screen.



7. Press the "Airplay" button on the iPhone.



8. Select RSE in AirPlay mode. Mirroring set to "ON".



(i) INFORMATION

When connected with AirPlay on and mirroring function off, IOS is able to play videos on the RSE and will still allow you to use your phone's other functions on the iPhone itself.

7-2. Phone Link Disconnection

- 1. Turn off (screen mirroring, Miracast, Airplay) from your smartphone to disconnect Phone link mode.
- 2. Press power button to disconnect Phone Link mode.





Part 8. AUX Mode

*This function is only available on Main Controller Unit.

The rear seat passenger can enjoy the same video file that is being played on the front Audio Video Navigation (AVN) unit in the vehicle through an optional connection that can be fitted.

- 1. Play a video file of AVN at driver side.
- 2. Press the AUX button on the specific RSE that users desire to play.



3. The same video file will be played as the AVN screen on the full screen.



(i) INFORMATION

Aux function will only be utilized when the system is connected the compatible AV output from the front AVN unit. please see your authorized vehicle service centre for further information on enabling this optional feature.

Part 9. Lights

Press the "

" on the main menu to access lights setting.







- 1. FM
- 2. Lights adjust
- 3. Screen brightness
- 4. Volume adjust
- 5. LED light adjust


Part 10. Installation

 Setp 1: Press the buttons on both sides of the long bracket to open both ends of the bracket. Then choose one set suitable of drivepipe from the provided drvepipes, and install them into the long bracket. (applicable diameters are: 10.2, 11.2, 12.2, 14, 16 mm)




Setp 2: Adjust the long bracket with drivepipes to the best length according to the distance between the two poles of your headrest, then press both ends of the long bracket to fix it into your car's headrest.

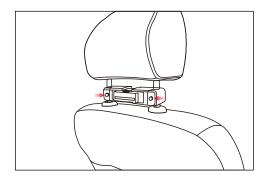

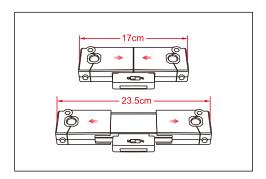


Part 10. Installation

Setp 3: Press and hold the button on the upper back of the player and insert the small bracket into the player. Then select a suitable position and release the button, the small bracket will be fixed in the position you choose.

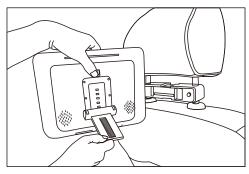


Setp 4: Insert the small bracket fully into the hole of the long bracket on the headrest and push the switch to the lock position.

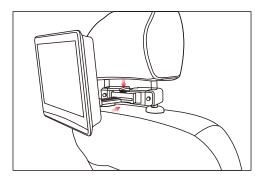

Part 11. Device Connection

- 1. The main unit and auxiliary unit are same displayed on the screen, and HDMI connection mode is required.
- 2. Click the icon " under the main menu of the auxiliary unit, then click this icon " " to realize the same display content of the main unit and auxiliary unit.

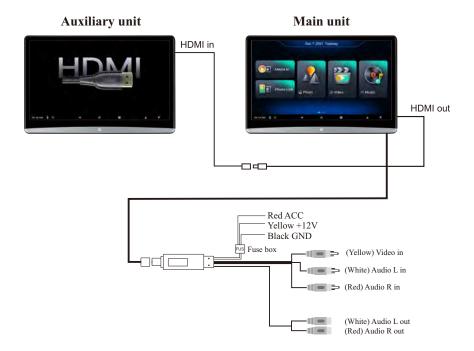

\triangle 1

Precautions

- The product is subject to change without notice.

 The Screens Shown in the examples may differ from actual screens, which may be changed without notice for performance and function improvement.
- Monitor Protection
 To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with the sharp tip.
- Cleaning
 When cleaning the touch screen, turn off the unit and use the soft cleaning cloth. Please do not use cloths such as
 those made with hard, chemical, or oiled materials (alcohol, benzene, etc.) This may damage or distort the
 surface of the unit
- Do not disassemble or repair the system. If problem exists, please contact your local dealer for advice.
- If the vehicle was parked in a very cold or very hot place, you may see a blank screen, distorted picture. The system will return to normal after the unit temperature returns to a normal operating range. This may take more than an hour depending on the temperature.

Warning

Please do not insert a separate USB device which supplies power to the multimedia USB port.