


NESA

Relax... Enjoy the Ride!®

NSR-N43

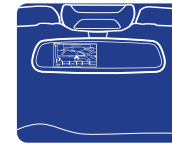

Navigation mirror

User manual



N277



Table of contents

Chapter one: Product introduction	1
Main feature	1
Specification	1
Package	1
Product introduction	2
Chapter two: Installation and wiring	3
How to install GPS mirror	3
How to wiring	4
Micro SD card	5
Chapter three: Adjustable guide line	5
About guide line	5
What the regular guide line is	6
How to adjust the guide line	6
Chapter four: Primary function	7
The main interface	7
Navigation Functions and features	8
Video operation interface	8
Audio player operation interface	10
Photo viewer operation interface	11
E-book reader interface and operation	13
Volume adjust	15
Unit conversion	15
Screen calibration	15
Language setting	16
Navigation path	16
Default set	16
Chapter five :Troubleshooting Guide	17

Chapter one: Introduction

Main features

Operating system: Microsoft window CE 6.0.
4.3 Inch ultra-high brightness display with resolution of 480×272 pixels.
Built-in speaker, volume adjustable.
Automatic fade-out hotkeys and touch-screen operation.
Built- in sensitive GPS antenna.
The navigation software runs from the Micro SD card directly.
Back-up camera display and adjustable guide line
Automatically brightness adjustment

Specification

CPU	MSB2531 ARM cortex A7 800MHz
Flash	128MB
Memory	128MB
Temperature	Operating Temperature: 0°C to 60°C Storage Temperature: -20°C to 60°C
Working humidity range	45% to 80% RH
Storage humidity tange	30% to 90% RH
Atmospheric pressure	86KPa to 106Kpa
GPS	Cold start : <42s ; hot start < 3s(in the open area)
Micro SD Card	The Maximum capacity of Micro SD card supported to 32GB

Package



The box contains the following accessories, please confirm:

- Rearview mirror GPS navigator
- Micro SD card
- Wire harness
- User's manual
- Car bracket

For the items listed above, please confirm the actual products. If any damage, Please contact with the distributor or the agent as soon as possible.

Please read this user's manual carefully

Product introduction

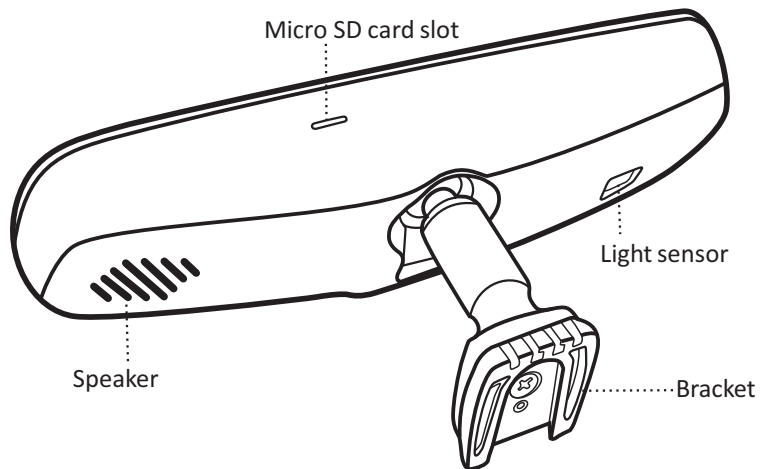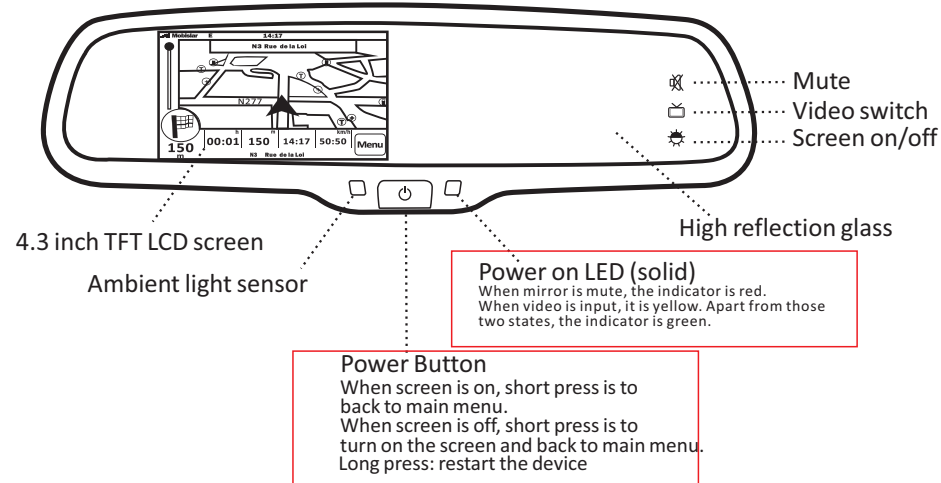

Chapter two: Installation and wiring

How to install GPS Mirror


Remove the original mirror



Different cars have different brackets, depending on your vehicle make and manufacturer.


There are many methods for removing the original rear-view mirror, however please don't force the mirror off the bracket. The manufacturer will not be responsible for damage caused to your vehicle as a result of installation of this mirror monitor.

Install GPS mirror monitor on the base

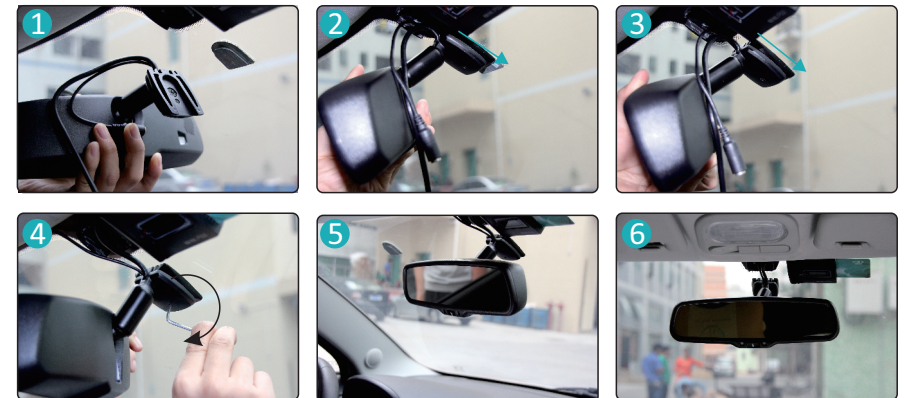


How to wire




After the mirror is mounted, you need to run the cable along the roof lining and down the pillar so you can connect to Power and the rear view camera

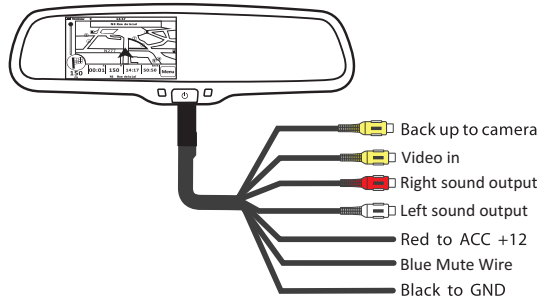

GPS rearview mirror monitor

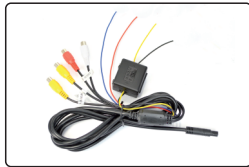

GPS mirror monitor cable

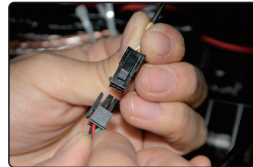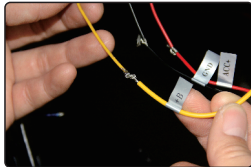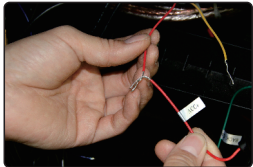

Micro SD card

The Micro SD card contains the navigation software, map .



Note:

Please do not take out the Micro SD card when the system is on. When inserting the Micro SD card pay attention to the right direction. If you insert the card improperly, you will damage the Micro SD card.

Chapter Three: Adjustable guide line


About guide line

Generally, to help drivers estimate the distance from obstacles, there are three lines for reference - red, yellow and green. Those three lines are displayed on the monitor when car is reversing. The green line is 3m from the back of car and the yellow line is 2m. The distant red line is 1m from the backside of car while the closed red line is 0.4m. Both reference lines on the left and right should leave 0.2m space from the car.

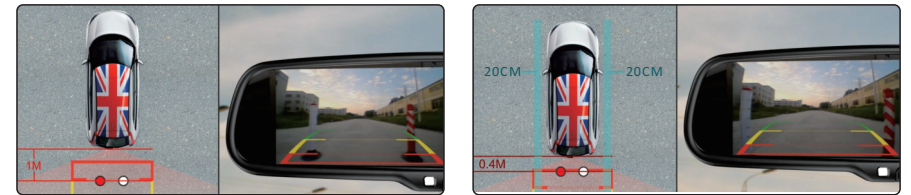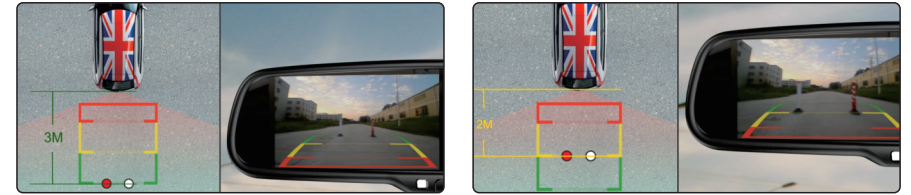

What the regular guide line is


Regular guide line is fixed. But installation sites of cameras are different as well as car size. The fixed guide line is not accurate enough for drivers. There will be a great difference between regular and fixed guide lines and car's real guide lines, especially when camera is mounted on the left or right side of car backside. It may cause accidents.

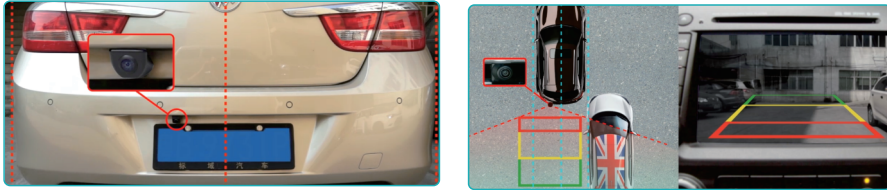

How to adjust the guide line

According to the site of standard reference line, we can put reference objects such as desks in the back area of car. Compared with the marked reference objects, we can adjust the sites and angle of two guide lines displayed on the monitor. You will get the accurate and safety guide lines once they coincide with the reference objects.

Long press setting button is to enter into "guide line adjustment" mode. The upper half of the remote is to adjust left guide line while the bottom half of the remote is to adjust the right one. The up, down, left and right buttons are to adjust the location of guide lines. The clockwise rotation contra rotation buttons are to adjust the angle of guide lines. It is easy to operate and calibrate.

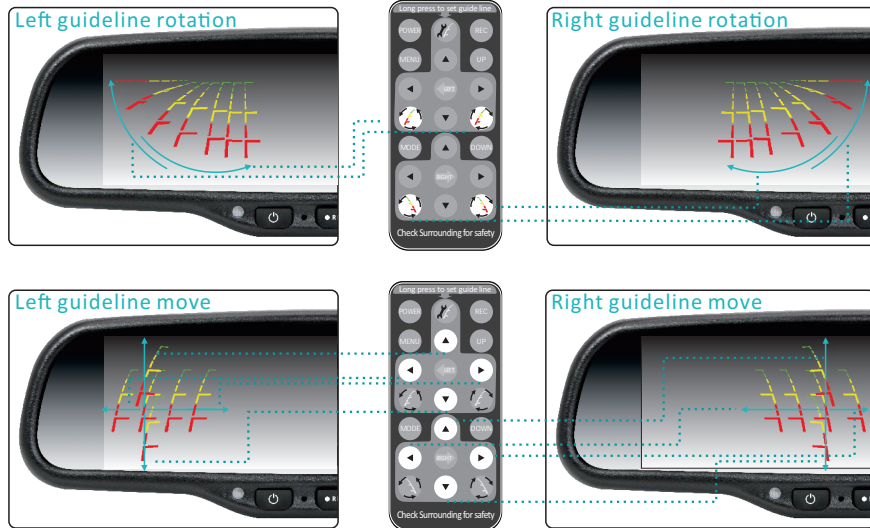


Chapter Four : Primary Function

The main interface

Main menu


Click the top left corner of the interface  Desktop display the date, show in Figure 4-2

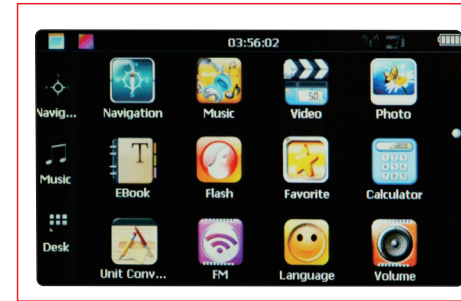


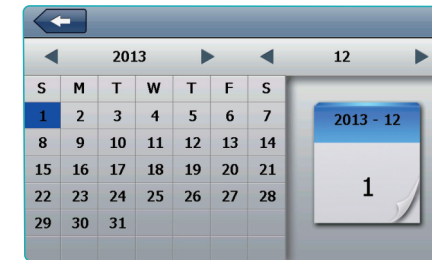
4-1




4-2

Double-click the date icon  enter the date setting interface, show in figure 4-3


Click the top left corner of the interface  change the desktop display background, show in figure 4-4




4-3

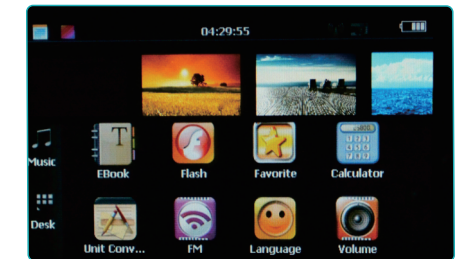

4-4

Click the left button  quick access to navigation map

Click the left button  open audio player

Click the left button  rapid deployment desktop application

Functions

Navigation	Provide navigation service
Video player	Support ASF, AVI, WMV, 3GP, MP4 and FLV format. Support progress adjust, pause and full screen play
Photo viewer	Support JPG, BMP and PNG format. Support photo rotate, enlarge/reduce pictures, automatic play and so on
E-book	Text format: txt. Support page selection
Audio player	Audio format: WMA, Mp3. Support random playing, sequential playing, repeat playing, pause, previous/next, volume
Setting	Brightness, Volume, Languages, Power, Time, System, Default, GPS Info, Navipath.

Navigation functions and features


Please see User Guide PDF stored on the supplied Micro SD Card.
Or to download, please go to
http://ndrive.com/sites/default/files/UG_V11_PND.pdf


Video operation Interface

Functions and features


Support ASF, AVI, WMV, 3GP, MP4 and FLV
Support full-screen playing, progress choosing and file selecting.
Before using the Video player, please copy your video file(ASF, AVI, WMV, 3GP, MP4 and FLV) to any folder

Operation:



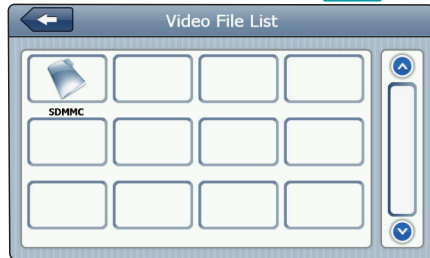


Single click the Video button  to enter the video file list as the picture 4-5

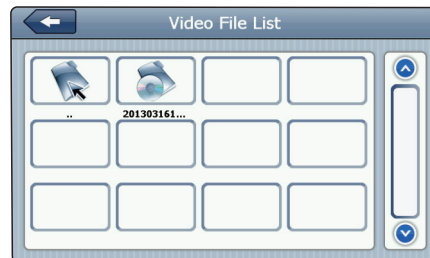

4-5









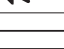
4-6


	Close	Single click to close current file.
	Last	Show last page
	next	Show next page
	Video folder name	Video folder name
	Video name	Show video name

Choose the video to enter the playing interface as 4-7

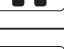

4-7

	Close	Click to close the video list;
	Play	It shows stop playing. Single click will continue to play.
	Next	Play next video.
	File list	Single click and shift to video file list, and then choose your favorite video.
	Volume	Single click volume. It shows volume is decreased when it shift toward left. While volume is increase when it is shifted toward right.
	Playing progress	Adjust the playing progress by slide the progress bar; go left for backwards, go right for forwards.
	Brightness adjust	Adjust brightness with stylus while moving toward left and right.

	Play interface	Full screen play. Double click to return normal play status.
--	----------------	--


Audio player operation interface

Functions and features

The audio player supports MP3 and WAV format, you could set the playing sequence as you wish. Before using the audio player, please copy the files to any folder.

Operation method

Single click the button  to enter Music file list as 4-8

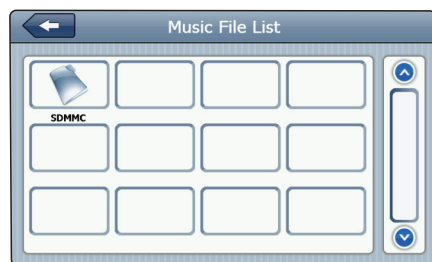





4-8




4-9

Function instruction

	Close	Close current file
	Last	Show last page
	Next	Show next page
	Song name	Show song name

Choose the song to enter the playing interface as 4-10

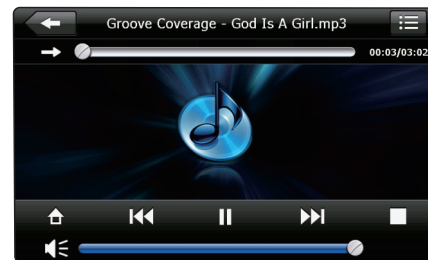

4-10










	Close	Single click to close the audio player
	Open the play list	Single click to display the play list, and choose your favorite
	Home page	Home page
	Previous song	Play the previous song
	Play / pause	To play and pause, single click to pause, click again to play continuously
	Stop	Single click to stop playing
	Next song	Play the next song
	Volume	Adjust volume. It shows volume is decreased when it shift toward left. While volume is increase when it is shifted toward right.
	Playing progress	Adjust the playing progress by slide the progress bar; go left for backwards, go right for forwards.

Photo viewer operation interface


Functions and features


Supports JPG ,BMP and PNG

Support picture rotate, picture enlarge/reduce and automatic play.

Before using the photo viewer, please copy your photos to any folder.

Operation method



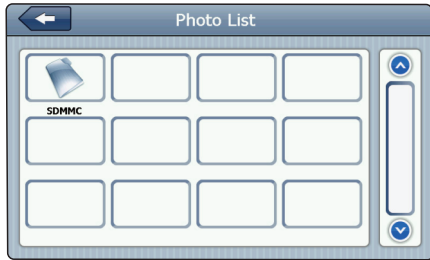

Single click the button  to open the photo list as picture 4-11



4-11





4-12







	Close	Close the photo list
 	Last	Show last page
	next	Show next page
	Flie	Single click to enter the photo file

Choose the picture to enter play interface as 4-13



4-13

	Close	Click to close the viewer
	Reduce	Reduce current picture in proportion

	Enlarge	Enlarge current picture in proportion
	Previous	Show the previous picture
	Next	Show the next picture
	File list	Single click and shift to video file list, and then favorite picture
	Rotate	Click to rotate the picture by 90 degree
	Automatic Play	Play all the pictures as a slide show in full screen from the current picture

E-book reader interface and operation

Functions and features


Support TXT

Support turning over page, page browse, and file choosing.


Before using e-book function, please copy your TXT file and save it to any folder.

Operation

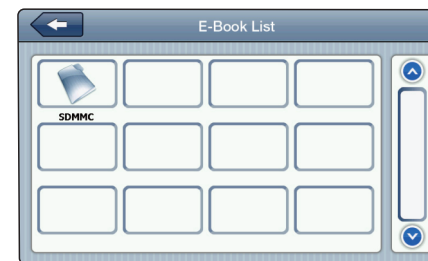


Single click the button  to enter E-book list as 4-14.

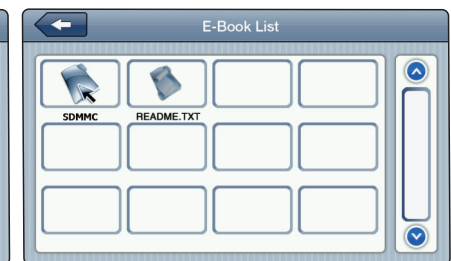


4-14




4-15

	Close	Close the current file
	Last	Show last page
	next	Show next page
	Name of file	Show name of the file



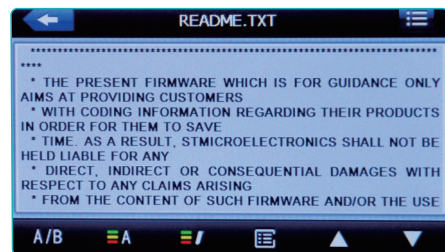



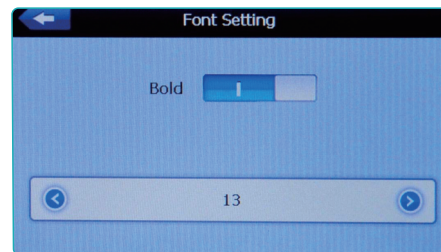

Choose file name to enter e-book reader as 4-16.




4-16




4-17

	Close	Single click and close e-book reader
	last page	Read last page
	next page	Read next page
	file	Single click to enter E-book list to choose favorite book
	font set	As 4-17
	color set	As 4-18
	Add book mark	Bookmarks page/location of open document.
	Open book mark list	As 4-19

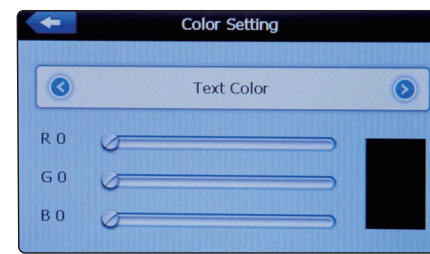


4-18

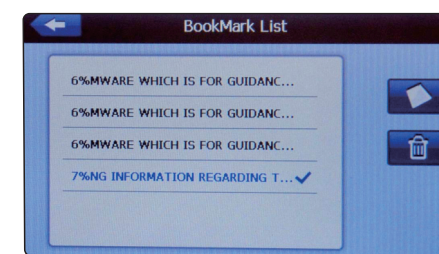


4-19

Volume adjustment


Single click  to open the volume adjustment interface as shown 4-20
 “Volume adjustment” includes:
 Speaker volume adjustment.
 “Screen click tone” setting.

Unit conversion

Single click  into Unit conversion interface as shown 4-21

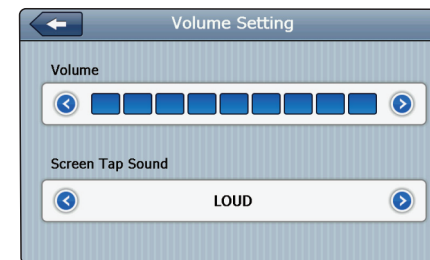


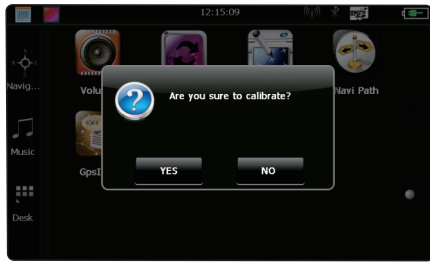
4-20

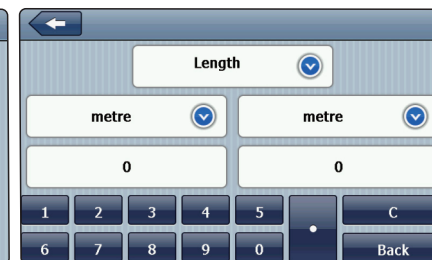


4-21

Screen calibration

Click the  to enter the screen calibration as 4-22
 Click **YES** it will move from in the sequence of the center, left up, left down, right down and right up till the calibration succeed, then click anywhere on the screen to save the calibration and exit to the main interface automatically. If not save the information, please wait 30 seconds and it will exit from current interface automatically.




4-22

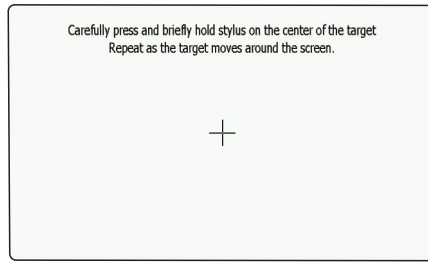


4-23

Language setting


Single click  to open the language settings interface as shown 4-24, Language settings including System prompt language selection. Single click language column to choose language

Navigation path

Click the  set the interface into navigation path, set the default navigation paths as shown in Figure 4-25.




4-24

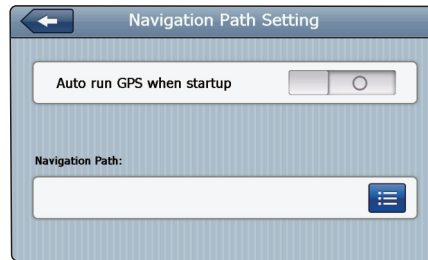


4-25

Default set


Single click  to enter the default setting as 4-26:

GPS information


Single click the  button and enter GPS information interface as 4-27

Chapter Five: Troubleshooting Guide

Problem	Reason	Solution
Can not display clearly	The back light is not bright enough	Adjust the back light
No response when clicking the button without sound	The touch-screen is not calibrated	Calibrate the touch-screen
	The volume in gps unit is at the lowest condition	Increase the volume
	The volume in map is at the lowest condition	Increase the volume
No GPS signal	There is interference signal around that meets the frequency of GPS signal.	Please drive away from the area where all GPS devices cannot receive signal.
The map date is lost	Received the signal slowly	Wait a moment when start the navigation page
The system gets stuck	Too many applications running	Press the button "R" or "power" reset the device
Can not read Micro SD card	Did not insert in a right direction change an other Micro SD card	Restart the product The GPS not support some low speed Micro SD card

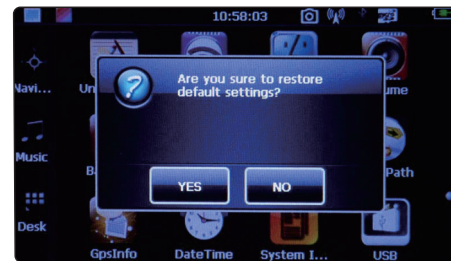

4-26

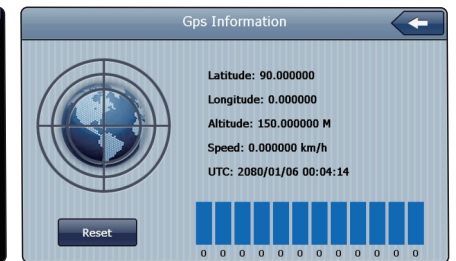

4-27