
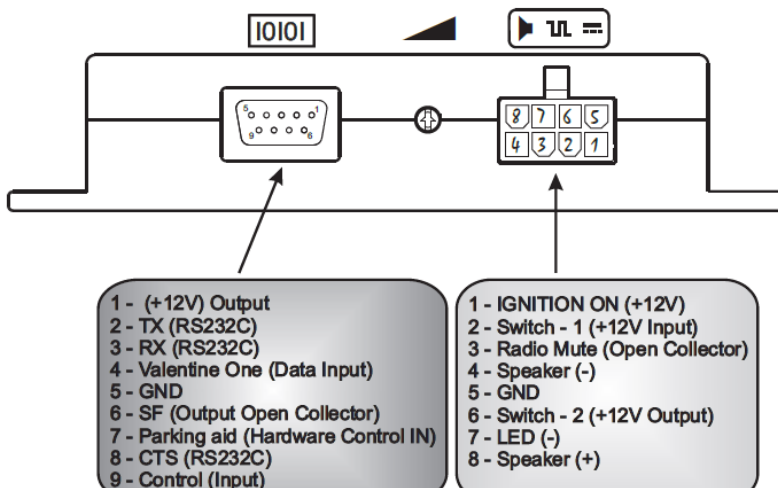
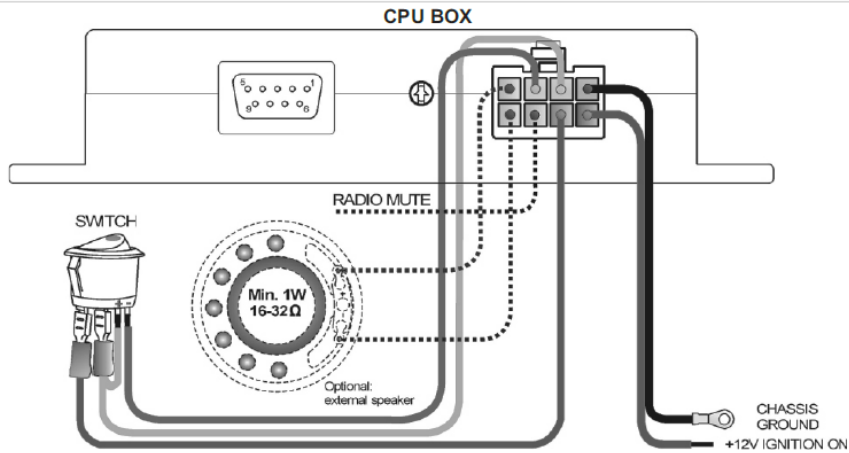


Escort ZR5i External Speaker Wiring

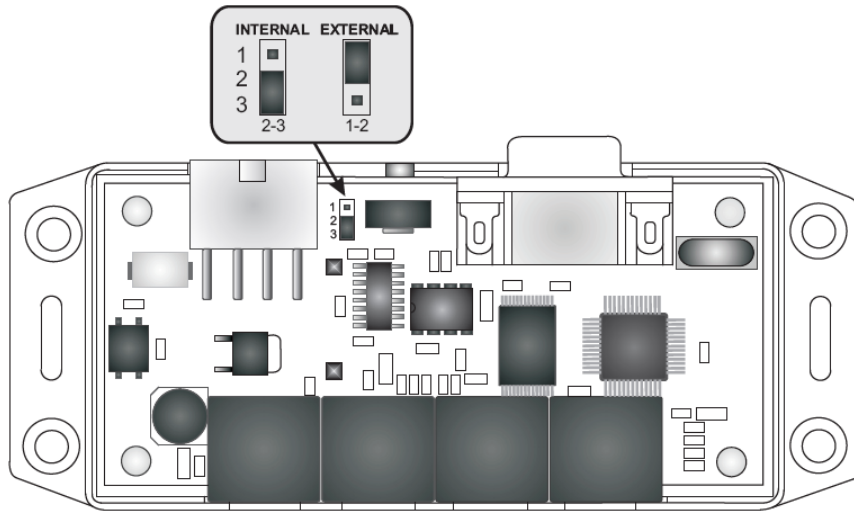

1. Set the jumper in pic 1 to position 1~2 for external or 2~3 to use the internal speaker
2. Connect external speaker wires to 4 & 8 in the wiring loom as per pic 2