

MDVR8AHD-4G Multi-Channel Driver Recorder

Installation and User Guide



www.fleetminder.com.au

8-CH AHD MDVR Brief User Manual

CONTENT

Specification
 MDVR Installation
 Control Bar Introduction
 AVI Backup
 Camera Mirror Function
 Record Setup
 Email Setup

2.Accessories 4.I/O Alarm Sensor Wire 6.Playback Introduction 8.2-CH Split Screen 10.Alarm &MD Alarm Setup 12.4G/WIFI Network Setup 14.User Management

SPECIFICTION

Items	Parameter	Performance		
	Chipset	Hi3520DV300		
	System	Linux		
System	Language	Chinese/English/Russia etc		
tems System Record Audio Playback nterface Function	Interface	Visual GUI,Support Mouse		
tems System Record Audio Playback Interface Function Others	Account Management	Admin/Sub-User management		
	Video Standard	PAL/NTSC		
	Video Input	8-CH AHD Input		
	Resolution	1080N/720P		
Record	Video Ouput	1-CH CVBS + 1-CH VGA Output		
	Image Quality	0-7 levels adjustable (0 is the best)		
	Recording Mode	Boot up/Manual/Schedule/Alarm Record		
	Motion detection	Support		
	Audio Input	8-CH Audio input		
	Audio recording	Audio & Video synchronized recording		
Audio	Audio Compression	G.726		
	Audio Output	1-CH Audio Output		
	Mode	Playback by Time/File/Channel/Event		
layback	Playback Channel	4-CH Local Playback		
vlayback		1-CH USB 2.0 For Mouse or Upgrade		
Interface	USB Port	Extendable 2-CH RS232 & 2-CH RS485		
	I/O Alarm Input	4-CH		
	I/O Alarm Output	1-CH		
	GPS	Optional		
	3G/4G Network	3G WCDMA/4G LTE Optional		
Function	WIFI Network	Optional		
	RJ45 Enternet Network	Standard		
	Pre-Recording	0-15s		
	Post-Recording	15s-300s		
	G-sensor	Support		
	Liparade Mode	Local Upgrade by USB/SD card		
Others		Remote Upgrade by 3G/4G		
Others	Storage	Max 1x 2TB HDD + 2x 128GB SD Card		
	Voltage Input	DC8-36V		
	Temperature	-20°C - +70°C		
	Dimension	188mm*148mm*60mm		
	Weight	2.35KG		



Power Connection





HDD MDVR INSTALLATION









Noted: Please kindly refere to Alarm/Motion detection setup for Video Amplifying, Email for alarm trigger



After Start MDVR,See MDVR UI like the Picture below

ENLARGEMENT

Click Enlarge button, and Drag Mouse to select a special area to auto enlarge.



PLAYBACK

Step-01: Login MDVR Menu, User Name: admin, Password: Null (No Password)

LOGIN	
User name admin Password Random code ADVL036RD2E3E9HY	

Step-02: Login "Search"=>Setup Playback time & CHs=> Search Out Video files, Like the Picture belows:

SEARCH							
🖣 Jan. 🕨 ┥	2019 🕨		СН	Start time	End time	Туре	Status
Su Mo Tu We Th	Fr Sa		3	14:54:29	15:33:08	Normal	Unlock
30 31 1 2 3	4 5		6	14:54:29	15:33:07	Normal	Unlock
6 7 8 9 10	11 12		1	14:54:30	15:33:08	Normal	Unlock
13 14 15 16 17	18 19		2	14:54:30	15:33:16	Normal	Unlock
20 21 22 23 24	25 26		5	14:54:30	15:33:06	Normal	Unlock
27 28 29 30 31	1 2		7	14:54:30	15:33:08	Normal	Unlock
3 4 5 6 7	89		8	14:54:31	15:33:07	Normal	Unlock
Start time 00:00	0:00		3	15:38:12	15:51:37	Normal	Unlock
End time 23:59	9:59		5	15:38:12	15:51:38	Normal	Unlock
Record type All	-		6	15:38:12	15:51:38	Normal	Unlock
Kecord type ∧II ✓ CH ☑ 1 ☑ 2 ☑ 3 ☑ 4 ☑ ☑ 5 ☑ 6 ☑ 7 ☑ 8							
Search Backup	Playback	First	Prev	Next	Last Bac	kup Lock	Unlock

Step-03: Check Video File=> Click "Playback"=>Choose the Playback CHs (Max 4-CH)=> Click "Playback"





Step-01:Insert U-Disk or External HDD into MDVR Via USB Port



Step-02:Come into "Disk"=>USB Storage=> Format

		• USB Stora	age	
HDD	USB Storage			
	Status	Capacity Total/Free		
USB Storage	Unformat	33.6G/33.6G	Format	Manage
	: 24 A 바이			

Step03:"Search"=>Search Out Recorded videos

SEARCH							
🖣 Jan. 🕨 🔺 2019 🕨		СН	Start time	End time	Туре	Status	
Su Mo Tu We Th Fr Sa		3	14:54:29	15:33:08	Normal	Unlock	
30 31 1 2 3 4 5		6	14:54:29	15:33:07	Normal	Unlock	
6 7 8 9 10 11 12		1	14:54:30	15:33:08	Normal	Unlock	
13 14 15 16 17 18 19		2	14:54:30	15:33:16	Normal	Unlock	
20 21 22 23 24 25 26		5	14:54:30	15:33:06	Normal	Unlock	
27 28 29 30 31 1 2		7	14:54:30	15:33:08	Normal	Unlock	
3 4 5 6 7 8 9		8	14:54:31	15:33:07	Normal	Unlock	
Start time 00:00:00		3	15:38:12	15:51:37	Normal	Unlock	
End time 23:59:59		5	15:38:12	15:51:38	Normal	Unlock	
Record type All		6	15:38:12	15:51:38	Normal	Unlock	
CH ☑ ☑ 1 ☑ 2 ☑ 3 ☑ 4 ☑ ☑ 5 ☑ 6 ☑ 7 ☑ 8							
Search Backup Playback	First	Prev	Next	Last Bac	kup Lock	Unlock	

A. Default 2-CH Split Screen Setup Guide

Step-01: Login MDVR Main Menu,=>BASIC=>DISPLAY=>Main Output setup=> Apply



Step-02: After setup above, Restart MDVR, The Video will be auto 2-CH Split Screen

Mirror Function

Noted: Mirror Function is mainly for Vehicle Cams installation for Left/Right Mirror, Up/Down Mirror

Step: Login in MDVR Menu=>Advance=>Channel=Analog Camera

Π		Channel	Contraction of the		NOTE
Retwork	Analog Camera				
	CH Mirror	Flip	Resolution	Mirro	r: Left/Right Mirror
P.T.Z			Auto		
				Flip:C	ip/Down Mirror
Channel	Сору СН 1 т	о СН 🛛 Сору			
			Default Apply		

f			RECORD		
SYSTEM	Basic	Bit rate	Schedule		 Always Mode
DATE/TIME	СН 1	Enable	Audio	Mode Always	
	2 3 4			Always Always Always	Schedule Mode
	Сору СН	1 • To	сн 📶 🕇	Сору	
				Default Apply	

Step-01: Login MDVR GUI=>"Basic"=>"Record"=>Mode: Scheduel

Step-02: Come into "Scheduel"=> Setup "Alarm" Time in Red

			RECOR	D		
SYSTEM	Basic	Bit rate	Schedule			
	сн	1	Manual	Normal	• Alarm	`
DISPLAY	Q, , , Sun.	2, 4, 6,	. 8 10 12	2 14 16	18 20	22
	Mon. Tue.					
A USER	Wed. Thu. Fri.					
	Sat. Copy CH	1 T T	о СН 🔲	Сору		
					Default	Apply

Step-03: Come into "Advance"=>"Alarm"=>"Motion"=> Check Motion CHs and Sensitivity (1=Highest)

	Alarm							
品 Network	Motion	Sen	sor	Vide	eo loss	Others		
@ IPC	CH E	nable	Sensitiv 2	rity T	Area Settings	Schedule	e Trigge Setting	er gs
(сомм	2		2	-	Settings Settings	Settings Settings	Setting	gs gs
P.T.Z	4		1(High	est) 🗸	Settings	Settings	Setting	gs
ظّ Alarm	Сору СН	1	То (сн	All	Сору		
O CAPTURE								
						De	fault Ap	ply

Step-04: Click Area "Settings" to Setup Motion Detection Area



Step-05: Click Trigger"Settings" to Setup Alarm linkage function



DST Time Setup

Login MDVR Menu=>"Basic"=>"Date/Time"=>"DST" To Setup DST Time

ft			DATI	E/TIME		
SYSTEM	Date/Time	DST				
DATE/TIME DISPLAY	Enable Mode Offset From To	© Wee © One Mar. Nov.	ek • hour • 2nd • 1st	O Date O Two hour Sun.	s 02:00:00 02:00:00	
					Default	Apply

Step-01:Login MDVR Menu=>"Basic"=>"RECORD"=>"BASIC" To Settle Channels & Audio Setup

f			RECORD	
SYSTEM	Basic	Bit rate	Schedule	
DATE/TIME	СН (1	Enable	Audio	Mode Always
DISPLAY	2	☑ ☑		Always
ရာရို RECORD		☑		Always
A USER	¯ Сору СН	1 то	сн 📶 🔽 са	ору
				Default Apply

Step-02: Login "Bit Rate"=>Setup Record Stream



Step-03: Login "Schedule"=>Setup Alarm Record & Manual Record Mode

-				RECO	RD				
SYSTEM	Basic	Bit rate		Schedul	e				
DATE/TIME	сн	1	• м	anual	•	ormal	• Alarm		*
DISPLAY	Sun.	2, 4, 6	5, , , 8	. 10	,12, ,	14 16	5 18 20	22	
ල්බී RECORD	Mon. Tue.								
A USER	Thu.								
	Sat.								
	Сору СН	1_	то СН	All	-	Сору			
							Default	Apply	

DVA

Step-01:Login MDVR Menu=>"ADVANCE"=>"NETWORK"=>"WIFI"=>"Enable" to auto search out WIFI SSID=>Click the WIFI SSID=> Input Password=> Connect WIFI

\blacksquare			Network	
品 Network	LAN	WIFI	3G/4G	
© IPC	WIFI		Enable	3
	ChinaNet-41	ſGe		A 후
🝚 P.T.Z				
کے Alarm				

Step-02:After WIFI Setup=>"3G/4G"=>"Switch: Enable"=>"Mode:Manual"=> Input "APN"=> "Access Number:*99#"

	Network						
品 Network	LAN	WIFI	3G/4G				
© IPC	switch		Enable	-			
сомм	Mode		Auto	Auto			
	User nan	ne	card				
P.T.Z	Password		****				
کے Alarm	Access n	umber	*99#				
C CAPTURE							
				Default	A met a		
				Delault	Apply		

Step-03: After Setup, "Net" Led On and Press "Info" Button to check network connection Status, If All success, the device already connected with Server and can login CMSV6 to see the live video.



FAQ

FAQ-01: HOW TO CHANGE SERVER IP

Re: Login MDVR Menu=>"ADVANCE"=>"COMM"=>"CMS" To Change Server IP,Device ID and Port Noted:When clients build their own server,they need to change the server IP or Please keep it default

f			сомм	
品 Network	CMS	E-MAIL	FTP	
 ◎ IPC ● COMM ● P.T.Z △ Alarm 	CMS Device Io Center IF Center D Center P	d omain ort	Enable 800179 157.122.097. 6608	214
CAPTURE				Default Apply

FAQ-02: USA CARRIER APN LIST

4G Carrier	APN
T-Mobile	fast.t-mobile.com
AT&T	nxtgenphone

FAQ-03: WHY NOT WORK AFTER 4G SETUP?

Reason-01: 4G Sim card no Service or Stop Work, Please kindly confirm it Reason-02: Input APN Wrong, Please kindly check APN Reason-03: 4G Antena do not wire with MDVR Reason-04: Input Wrong Server IP and Port what if you changed, So please kindly check CMS Setup

What if still not solved, Please kindly email "Step-03 info" Picture to our technical support team to check

Function Description: When Alarm Trigger, The MDVR will Auto Send Email to users

Step-01: Login MDVR Menu=>"ADVANCE"=>"COMM"=>"E-MAIL"=>"E-mail: Enable"=>Input Media Server(SMTP) => Port=> Connection Security: "None,SSL/TLS" Optional=> User Name: Sender's Email address=> Password: Sender's Email Password=> To: User's/Reciever's Email Address=>CC:Copy Email's Address

\blacksquare		СОММ		
品 Network	CMS E-MAIL	FTP		
 IPC COMM P.T.Z Alarm CAPTURE 	E-MAIL Mail server(SMTP) Port Connection security User name Password To CC Sending interval	Enable		
NOTE After Setup the in and verify all the s	fo, Please kindly click "Tes setup well.	Test Default Apply		

Step-02:Login MDVR Menu=>"ADVANCE"=>"ALARM"=>"Motion/Sensor/Video Loss/ Other" Alarm Setup=>"Trigger" =>Check "Email" Button.

				Alarm		
品 Network		Motion	Sensor	Video loss	Others]
	Record		1 2 3	4		
(O) IPC	Snapsh	not	1 2 3	4		
	Send E	-MAIL				
∰ сомм	Alarm	output	\sim			
	Push					
P.T.Z	Alarm	output duration	10s	_		
	Buzzer Pop-up screen Pre record		None			
🎦 Alarm			None			
			10s	-		
O CAPTURE	Post re	cord	30s	-	×	
				Default	OK Exit	
					Defa	ult Apply

Step-01: Login Main Menu=> Basic=>User=>Add

f				USER			NOTE
SYSTEM	Use	er 📃					MD\/P will default
DATE/TIME		User nam admin	e	User type Administrator	Binding Client MAC Unlimited		Administrator account
DISPLAY		q		Normal	Unlimited		click 'admin" to come into
្ញិ៍ពី RECORD							psw and remember it
Q USER							
					Add Delete	e	

Step-02: Come into "Edit user" GUI to setup user name, Password etc info and check "Authority"

	Edit user		
 SYSTE User name Password Retype password User type Binding Client MAC System Authority System Record COMM Backup Log 	Normal Normal 00:11:22:33:44:55 Date/Time Alarm Remote device Remote monitor Volume Apply Exit	AC	NOTE Client can setup different user account for different drivers to allow them to have different authority