



Fleetminder MVT-3G7

Hardware User Guide




1. Introduction of Hardware:



Power connector and mini USB connector



LED indicator

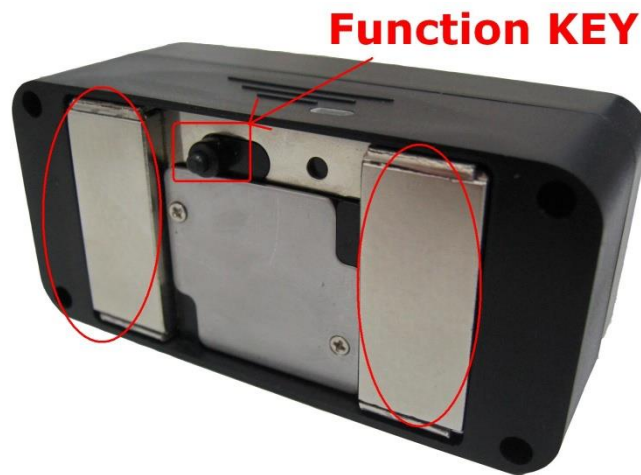

Magnets & Function Key

2. Charging:

Please use power adapter to charge the device.

- User can charge MVT with or without switching it on, but there is no indication when the toggle switch is off.
- **LED indicator will display current charging status for 10 seconds after switching on MVT (with power adapter connected).**

4. Insert SIM Card:

Please follow the steps below to insert SIM Card correctly:

- Unscrew the metal cover on the bottom of MVT.
- Unlock the SIM card slot by sliding the holder toward the “OPEN” direction.
- Place SIM card into the SIM card holder.
- Lock SIM card slot by sliding the holder toward the “LOCK” direction.
- Screw the metal cover back.



Please ensure SIM card is placed in the holder correctly; otherwise, the device may not detect SIM card successfully.

5. Power switch:



Power switch (in brick-red) is located beside the SIM card slot. By sliding it to the left can switch on MVT; sliding it to the right switches it off.

6. Mount the Device

The device includes two magnets that can be attracted to flat metal.

7. LED Indicator:

Indicators	Blinking Sequence	Status
Red	1 second on / 1 second off	GSM registered.
	*1 second on / 3 seconds off	Charging.
	*Solid on	Fully charged.
Blue	1 second on / 1 second off	GPS fixed.
Purple	1 second on / 1 second off	GPS fixed and GSM registered.
	0.1 second on / 0.1 second off	GPS, GSM not ready.